




# “I’ve been a Plascore fan for many years.”

**John Weaver**, Facilities Manager  
Birck Nanotechnology Center, Purdue University

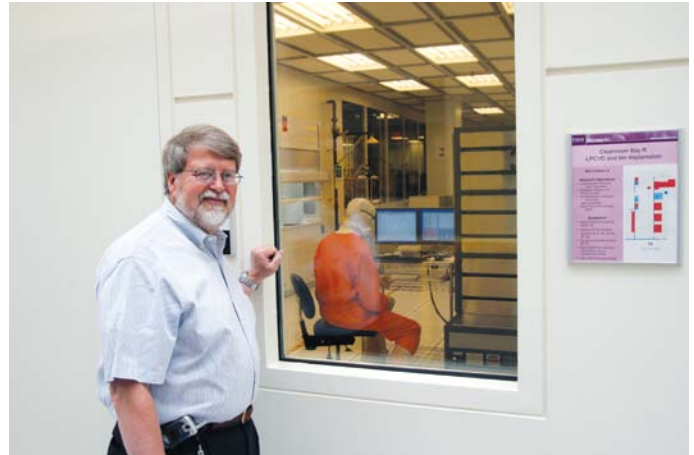

**J**ohn Weaver knows clean. During his diverse and successful career, John has overseen the design, construction and operations of more than 25 clean work environments around the world. His projects range from the 60,000 sq. ft. semiconductor facility in Kokomo, Indiana to the new Birck Nanotechnology Center (BNC) at Purdue University, which holds the distinction of being the largest, cleanest academic cleanroom facility in the country.

When the time came for John to apply his expertise in the design of the \$58 million BNC, the Plascore cleanroom system was a natural choice.

“Over the years, I’ve found the Plascore panel and wall system to be very easy to work with,” says John. “It’s an exceptionally durable system; which means greater return on our investment. It’s well engineered, flexible and the panels are conductive with a good epoxy finish.”

Winner of the 2007 Controlled Environments Experts’ Choice Award for Facility of the Year, the BNC comprises 187,000 sq. ft. feet, including offices for 45 faculty, 21 clerical and technical

staff, and up to 180 graduate students. At the heart of the facility is the 25,000 sq. ft. Scifres Nanofabrication Laboratory cleanroom.

The cleanroom is a typical semiconductor-style, three-floor cleanroom with a subfab level, cleanroom level and air-handling level. A smaller bay and larger chase design reduced initial cost and allows equipment to be bulkheaded through the chase walls, a style well suited to a research environment. Six bays are ISO 3 (Class 1), five bays are ISO 4 (Class 10), and two bays are ISO Class 5 (Class 100) clean zones. The bay/chase design makes optimum use of the area under filtration, positioning equipment in the chase where lower clean levels, easy access for routine maintenance help reduce operating costs.

“The Plascore wall design gives versatility to our bay and chase approach,” says

John, “and allows us to easily modify the panels with cut outs for equipment used in deposition, patterning, etching and doping. In an R&D environment that’s especially important as equipment needs change.”

Plascore manufactures several demountable wall systems, most notably the F5075 2” framed wall allowing attached items and the L2550 ¼” liner wall for lining traditional gypsum or block construction walls that often serve as the cleanroom perimeter. Both these wall systems are used in the BNC; the F5075 predominately as the wall separating the bay from the chase.



“Over the years, I’ve found the Plascore panel and wall system to be very easy to work with. It’s an exceptionally durable system; which means greater return on our investment.” says John.

**Top Left:** Large windows add light and a higher degree of safety.  
**Top Right:** Plascore doors are an integral part of the wall system.  
**Bottom:** Photolithography is a key process at Birck.

“... the small details help make the chase more productive and user-friendly. We can easily customize the functionality of the wall’s back side.”

The wall system is mounted to the raised floor utilizing a floortrack and to the ceiling grid utilizing a headtrack assembly. Studs are then attached and panels installed to complete the wall. The walls can be easily relocated to align with any layout of the ceiling grid.

While utility manifolding is accomplished below the raised floor, the battens on the back of the wall facing the chase have T-grooves that accept utility mounting and Unistrut brackets. In an environment where the latest, million-dollar equipment is the rule, the ability to attach shelving on the backside of the bay wall is an added bonus.



**Above:** Plascore doors, wall and ceiling panels.

“Might sound trivial to point that out,” says John, “but the small details help make the chase more productive and user-friendly. We can easily customize the functionality of the wall’s back side.”

The facility was designed to minimize the cost and complexity of bringing utilities to new equipment; unanticipated equipment installations are common in a research facility.

“We’ve had to change-out walls several times,” adds John. “That’s when you really appreciate the flexibility of the Plascore system. With its T-nut and T-groove configuration utilizing mounting blocks and standard panels,

reconfiguration is easier, with lower costs and less disruption to our operations. Even within the best laid plans, the future is ever changing in a research facility.”

Plascore furnished windows and doors throughout the cleanroom. Special automatic doors were required in certain areas: the wall panels were easily modified to accept the 3rd party doorframes. A significant amount of glass was designed into the cleanroom perimeter and the cleanroom interior walls. John has found this ‘fish bowl effect’ encourages protocol adherence and also enhances safety by making large portions of the cleanroom visible, exposing cleanroom activities without breaching the cleanroom.

The BNC ceiling combines 3rd party air filters and lighting in conjunction with Plascore’s blank ceiling panels installed in a 2’ x 4’ grid system. Ceiling panels and filters can be added or removed as cleanliness needs or the chase-bay area ratio changes. The Plascore ceiling panels allow walking or crawling on the ceiling and a durable, easily cleanable surface for the cleanroom ceiling. “I had in essence a custom ceiling made,” continues John. “The walkable ceiling panels, unique to Plascore, are a big plus.”



**Top:** Birck Nanotechnology Center, Purdue University.  
**Middle:** Plascore cleanroom system is hard at work.  
**Bottom:** Plascore walls readily adapt to special 3rd party doors and bulkheaded equipment.

*John Weaver has a B.S. in Chemistry from Adrian College, and 35 years of industrial experience in the design, construction, and operation of cleanrooms and other clean facilities. Beginning his career with RCA Corporation, he has worked for Hughes Aircraft Company and Delphi Electronics and Safety. He has been at Purdue since 2001 on assignment from Delphi and since 2006 as a Purdue employee. John recently received the 2008 Institute of Environmental Sciences and Technology (IEST) Fellow Award for his numerous publications and significant technical contributions to the advancement of cleanroom design and construction, particularly in the emerging field of nanotechnology.*

Plascore, Inc., employs a quality management system that is AS/EN/JISQ 9100, ISO 9001:2008 and ISO 14001:2004 certified.

**IMPORTANT NOTICE:** The information contained in these materials regarding Plascore’s products, processes, or equipment, is intended to be up to date, accurate, and complete. However, Plascore cannot warrant that this is always the case. Accordingly, it is a purchaser’s or user’s responsibility to perform sufficient testing and evaluation to determine the suitability of Plascore’s products for a particular purpose. Information in these materials and product specifications does not constitute an offer to sell. Your submission of an order to Plascore constitutes an offer to purchase which, if accepted by Plascore, shall be subject to Plascore’s terms and conditions of sale. **PLASCORE MAKES NO WARRANTIES OF ANY KIND REGARDING THESE MATERIALS OR INFORMATION, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.** Plascore owns and shall retain all worldwide rights in its intellectual property, and any other trademarks used in these materials are the property of their respective owners. The information in these materials shall not be construed as an inducement, permission, or recommendation to infringe any patent or other intellectual property rights of any third parties.



**Corporate Headquarters**

**Plascore Incorporated**  
 615 N. Fairview St.  
 Zeeland, MI 49464-0170  
 Phone (616) 772-1220  
 Toll Free (800) 630-9257  
 Fax (616) 772-1289  
 Email sales@plascore.com  
 Web www.plascore.com

**Europe**

**Plascore GmbH&CoKG**  
 Feldborn 6  
 D-55444 Waldlaubersheim  
 Germany  
 Phone +49(0) 6707-9143 13  
 Fax +49(0) 6707-9143 40  
 Email sales.europe@plascore.com  
 Web www.plascore.de